

# **PROFITAP** *Industrial Ethernet Protocol Analyser*

## Quick Installation Guide

### Getting started

Profi-Tap C1AP-100 comes with one USB Key with Drivers & Analyzer Software, one USB cable, two RJ45 Patch cable and a pouch for carrying



**X** All necessary drivers, manuals and tools are located on the provided USB-Key. In addition, check our website for latest drivers and informations available.

### Overview

There are 2 RJ45 ports, connected to the network on the front and 1 USB connector to the Analyzer on the back.

Two "Link/Act" LEDs indicate Link (on) and Activity (blink), Two "Error" LEDs indicate CRC errors (flashing/on) on the network link. The rear Power LED is on if USB Port is connected.



**X** Profi-TAP needs to run exclusive on a single USB Port, do not use other devices on same PC USB Port nor connect the Profi-TAP via a USB Hub.

### Installation

- Insert the USB-Key for accessing/copying the contents to a installation folder
- Connect the network using the Category 5 UTP cables
- Connect the USB port to a free PC/MAC USB2.0 port, the Power LED lights
- Install the driver according to your Operating System, locate the driver on USB-Key or installation folder
- Setup the Profi-TAP Network Card IP adress as shown :  
IP address : 192.168.0.1  
Submask : 255.0.0.0



**Profi-TAP is now ready to be used !** Select it as source for your Analyzer (individual SetUp may vary — refer to your Analyzer's Manual)

**X** For using the Statistic Tool refer the Profi-TAP User Manual